



DIGITAL EARTH TESTER KEW 4105DL / KEW 4105DL-H



KEW 4105DL / 4105DL-H Specifications

Earth resistance measurement	20Ω	200Ω	2000Ω	
Measuring range	0.00 - 2000 Ω			
Display range	0.00 - 20.99 Ω	0.0 - 209.9 Ω	0 - 2099 Ω	
Accuracy*1	±1.5%rdg±0.08 Ω *2 ±1.5%rdg±4dgt			
Auxiliary earth resistance*3	<10 kΩ	<50 kΩ	<100 kΩ	
Comparator reference value	10 Ω	100 Ω	500 Ω	
Earth voltage measurement				
Measuring range	0.0 - 300.0 V AC (45 - 65Hz) / ±0.0 - ±300.0 V DC			
Display range	0.0 - 314.9 V			
Accuracy	±1%rdg±4dgt			
Applicable Standards	IEC 61010-1 CAT IV 100 V / CAT II 150 V / CAT II 300 V Pollution degree 3			
	IEC 61010-2-030, IEC 61010-031, IEC 61557-1, -5			
	IEC 60529 IP67, IEC 61326-1, -2-2 (EMC), EN50581 (RoHS)			
Power source	LR6 (AA)(1.5V)×6			
Dimensions	121(L)×188(W)×59(H) mm (including case lid)			
Weight	Approx. 690g (including batteries and case lid)			
Accessories for 4105DL 7267 (Cable reel for Earth resistance tester (red))			,	
(Cable Reel Set Model)	7268 (Cable reel for Earth resistance tester (yellow))			
	7271 (Earth resistance test leads)			
	7127B (Simplified measurement probe)			
	8041 (Auxiliary earth spikes[2 spikes / 1set]), 9121 (Shoulder strap)			
	9190 (Carrying case), LR6 (AA)×6, Instruction manual			
Accessories for 4105DL-H	7266 (Earth resistance test leads [red-20m, yellow-10m, green-5m / 1set])			
(Hard Case Model)	7127B (Simplified measurement probe)			
	8041 (Auxiliary earth spikes[2 spikes / 1set]), 9121 (Shoulder strap)			
	9191 (Hard case), LR6 (AA)×6, Instruction manual			
Optional	otional 7272 (Precision measurement Cord set)			
	8259 (Adapter for mea	asurement terminal)		

- *1 For precision measurement, auxiliary earth resistance should be 100 Ω ±5% or less.
- $^{*2}\,\text{At}$ simplified measurement add $\pm 0.10~\Omega$ to the specified accuracy.
- *3 Accuracy within the auxiliary earth resistance: ±5%rdg±10dgt.


4105DL Included Accessories



4105DL-H Included Accessories



Strong noise rejection!

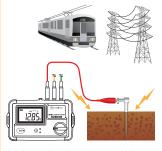

Noise rejection up to 25V rms allows accurate testing in noisy environments.

Earth voltage warning

A red LED comes on if an external voltage is detected.



[LED light comes on if:]

Frequency	Voltage	
0 – 10Hz	> 10 V	
10 – 100Hz	> 25 V	
100 – 400Hz	> 5 V	

Robust steel made earth spikes



Earth measurements are possible up to 100kΩ* of auxiliary earth spikes resistance.

Auxiliary earth resistance check

4105DL checks if the auxiliary earth resistance is:

Too high at S(P) terminal



Too high at H(C) terminal



Within allowable range (Green LED OK)



Optional Accessories





7268





8041



Adapters for measurement terminals



8259



Safety Warnings:

Please read the "Safety Warnings" in the instruction manual supplied with the instrument thoroughly and completely for correct use. Failure to follow the safety rules can cause fire, trouble, electrical shock, etc. Therefore, make sure to operate the instrument on a correct power supply and voltage rating marked on each instrument.

For inquires or orders :



KYORITSU ELECTRICAL **INSTRUMENTS** WORKS, LTD.

2-5-20, Nakane, Meguro-ku, Tokyo, 152-0031 Japan Phone:+81-3-3723-0131 Fax:+81-3-3723-0152 E-mail:info-eng@kew-ltd.co.jp

[%] 20 Ω range 10 k Ω , 200 Ω range 50 k Ω , 2000 Ω range 100 k Ω .